

# Manual for REIZEN Digital Analog Talking Water-Resistant Watch

## IMPORTANT NOTES:

1. This watch is resistant to rain and splashing, but should not be submerged in water.
2. Do not expose watch to extreme heat or freezing temperatures.
3. Do not expose watch to strong static or electromagnetic fields (magnets, etc)
4. The watch can withstand normal shaking, but is not shock resistant. Dropping or unusually rough handling may cause damage.
5. Do not expose to gasoline, oil, detergents, glue, paint, etc., as damage to the sealing ring, watch case and surface could result.
6. Use only a soft cloth and clear water for cleaning.
7. Some watch models have silk-screened patterns imprinted on the watchband. Be careful not to rub too vigorously or the pattern may be worn off.
8. Do not wear the watch too tightly around your wrist. It is recommended that the watch be loose enough that you can insert a finger under the band.
9. Keep the watch stored in a dry environment when not in use
10. The coating of the watch may fade and scuff under heavy pressure, long term use, abrasion or friction.
11. The resin watchband may show a white shading in use. This powder is not harmful and can be easily wiped away. To extend the life of the watchband, wipe off any dirt or moisture on the band as soon as possible.
12. DO NOT OPEN THE WATCHCASE. The precision electronic parts should be serviced only by an authorized repairperson. If water or smoke gets inside the watch, it should be serviced immediately to avoid corrosion or other damage.
13. Please keep your owner's manual in a safe place for future reference.

## STANDARD DISPLAY AND BUTTON FUNCTIONS:




- |                                |             |
|--------------------------------|-------------|
| : Hourly announcement on       | B1: MODE    |
| : Alarm on                     | B2: MINUTE  |
| PM : Afternoon                 | B3: HOUR    |
| AL : Alarm in adjustable state | B4: TALKING |

Note: Different models have different designs, but all have the same functions and settings.

## OPERATION:


### Adjust analog time

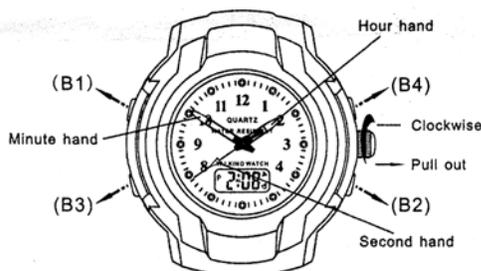

Gently pull out the crown, then adjust the exact analog time by turning the crown clockwise. Push the crown in after finishing the adjustment (see diagram above).

### To set Digital time

 Press B1 to change the function as follows:



### TO set time

Starting from time display mode, press B1 [MODE] to enter time setting mode. Press B2 [MIN], B3 [HOUR] to adjust minutes and hours respectively to the correct time.

### TO set Alarm time

Starting from time display mode, press B1 [MODE] twice to enter alarm setting mode. AL symbol will display with blinking numerals. Press B2 [MIN], B3 [HOUR] to adjust minutes and hours respectively to the appropriate alarm time.

### Choose the alarm sound and turn the alarm on or off.

In time display mode, Press B3 (HOUR) button to toggle through the alarm sound choices. (Current alarm time will be displayed.) When you reach the desired alarm sound, wait for the watch to return to time display mode. An alarm icon will be displayed on the LCD. To turn the alarm off, toggle through alarm sounds until no sound is heard and the alarm icon disappears from the LCD.

### Turn on/off hourly announcement

Starting from time display mode, Press B2 [MIN] to activate (see symbol) or deactivate hourly announcement (no symbol).

### Snooze function

When the alarm sounds, press B4 [TALKING] to stop the alarm and start the snooze function. The alarm will sound again every five minutes after the snooze starts. The alarm will sound up to six times.

### Listen to the alarm sound

In normal time display mode, press and hold B4 [TALKING] button. It will play the alarm sound after announcing the current time.

### Battery replacement

The LCD display uses one CR2016 battery. The analog movement uses one SR626SW battery. Replace the batteries when the digital numbers appear blue or vanish, or the volume fades out. It is recommended that both batteries be changed at the same time.

90-Day Manufacturer's Limited Warranty.

Reizen Inc.  
P.O. Box 3312  
Farmingdale, NY 11735  
www.ReizenUSA.com



## Manual for Digital Analog Talking Water-Resistant Watch

### Important Notes:

1. This watch is resistant to rain and splashing, but should not be submerged in water.
2. Do not expose watch to extreme heat or freezing temperatures.
3. Do not expose watch to strong static or electromagnetic fields (magnets, etc.)
4. The watch can withstand normal shaking, but is not shock resistant. Dropping or unusually rough handling may cause damage.
5. Do not expose to gasoline, oil, detergents, glue, paint, etc., as damage to the sealing ring, watch case and surface could result.
6. Use only a soft cloth and clear water for cleaning.
7. Some watch models have silk-screened patterns imprinted on the watchband. Be careful not to rub too vigorously or the pattern may be worn off.
8. Do not wear the watch too tightly around your wrist. It is recommended that the watch be loose enough that you can insert a finger under the band.
9. Keep the watch stored in a dry environment when not in use
10. The coating of the watch may fade and scuff under heavy pressure, long term use, abrasion or friction.
11. The resin watchband may show a white shading in use. This powder is not harmful and can be easily wiped away. To extend the life of the watchband, wipe off any dirt or moisture on the band as soon as possible.
12. DO NOT OPEN THE WATCHCASE. The precision electronic parts should be serviced only by an authorized repairperson. If water or smoke gets inside the watch, it should be serviced immediately to avoid corrosion or other damage.
13. Please keep your owner's manual in a safe place for future reference.

### **Choose alarm sound and turn alarm on/off:**

In time display mode, press B3 [HOUR] button to toggle through alarm sound choices. (Current alarm time will be displayed.) When you reach the desired alarm sound, wait for the watch to return to time display mode. An alarm icon will be displayed on the LCD. To turn the alarm off, toggle through alarm sounds until no sound is heard and the alarm icon disappears from the LCD.

**New copy for Battery replacement section at bottom of second column:**

### **Battery replacement**

The LCD display uses one CR2016 battery. The analog movement uses one SR626SW battery. Replace the batteries when the digital numbers appear blue or vanish, or the volume fades out. It is recommended that both batteries be changed at the same time.

### 90-Day Manufacturer's Limited Warranty

Reizen Inc.  
P.O. Box 3312  
Farmingdale, NY 11735  
[www.ReizenUSA.com](http://www.ReizenUSA.com)