

709117

OPERATION INSTRUCTION TALKING CALCULATOR

FEATURES

This versatile 10-digit talking calculator has an easy-to-read display and voice announcements plus a talking alarm clock.

Its features include:

Voice Response - announces entry numbers and calculation results.

Units/Digits Talking Selection Function - lets you set the calculator to announce calculation results in units or digits.

Percent key - simplifies discount, percentage change, and tax calculations.

Repeat Answer Function - lets you hear again entries or answers.

Talking Alarm Clock - announces time and also displays date.

OPERATION

ENTERING CALCULATOR, CLOCK MODES

- To Enter Calculator Mode: press the number keys to start the calculation.
- To Enter Time Mode: press **TIME** key to display the time or press **DATE** key to display the Date.

-1-

CORRECTING ENTRY ERRORS

If you enter an incorrect number, press **CE** once. Then enter the correct number and proceed with your calculation. If you enter an incorrect function key other than **M+**, **M-**, **MR**, **MC**, **%**, **=**, simply press the correct key and continue. For example, if you press $7 \times \div + 5 =$, the calculator performs $7 + 5 =$ and 12 appears on the display.

DISPLAY ERRORS

E (overflow error) appears on the display when you:

- Attempt a calculation where the result exceeds 10 digits to the left of the decimal point.
- Try to add a value to the contents in memory and the result exceeds 10 digits (the contents in memory are not changed).
- Attempt to divide a number by 0. To remove the error but keep the display, press **CE** once. To clear the display, press **CE** twice or **AC** once.

-4-

SETTING THE TIME

- Press **TIME** key to display the time.
- Press **M-** (**TIME**) keys to set time.
- Enter the hour, minute and second by pressing the number keys. For example, to enter the time 2:45:20 PM, press 02 45 20 then **AM/PM** key to show "PM" on the display. Press **MC** (**ENTER**) key to complete the time setting.

SETTING THE DATE

- Press **DATE** key to display the date.
- Press **M+** (**DATE**) key to set the date.
- Enter the month, day and year by pressing the number keys. For example, to enter the date 01-01-2008, press 01 01 2008 then press **MC** (**ENTER**) key to complete the date setting.

SETTING THE ALARM

- Press **TIME** key to display the time.
- Press **MR** (**ALM**) key.
- Enter the hour and minute by pressing the number keys. For example, to enter the alarm time 8:35 AM, press 08 35 then **AM/PM** key to show "AM" on the display. Press **MC** (**ENTER**) key to complete the time setting.
- Press **ALM ON/OFF** to turn on the alarm as indicated on the LCD.

-2-

CALCULATION EXAMPLES

Basic Arithmetic Calculations

You Press	You See
123+456-789=	-210
24+36-75x8÷9=	-13.33333333

Percentage, Add-on, and Discount Calculations

You Press	You See
720x20%	144
100+30%	130
100-20%	80

Memory Calculations

- To clear the current value from memory (set it to 0), press **MC** (memory clear) once.
- To add the displayed value to the current value in memory, press **M+**, and "M" appears on the display when a value is stored in the calculator's memory.
- To subtract the displayed value from the current value in memory, press **M-**.
- To recall the value from memory, press **MR** (memory recall) once.

-5-

CONTROLLING THE VOLUME

Move the **VOLUME** sliding switch to High for high volume, **LOW** for low volume and **OFF** to turn off the sound.

USING THE EARPHONE

For privacy, you can connect the earphone to the phone jack. The volume can be adjusted using the in-line volume control knob on the earphone.

CALCULATION

HEARING CALCULATION RESULTS IN UNITS OR DIGITS

Press **UNIT/DIGIT** key to choose between hearing calculation results in digits (for example it announces 475 as "four seven five") or units (for example, it announces 475 as "four hundred seventy-five").

When you repeatedly press **UNIT/DIGIT** and it toggles between Unit and Digit with corresponding display of "UNIT" and "DIG" on the display.

REPEATING A VOICE ANNOUNCEMENT

Press **REP** to repeat a voice announcement of the last entry or the last calculation result.

-3-

You Press	You See
MC	0
4 x 5 M+	M 20
7-2 M-	M 5
MR	M 15

INSTALLING/REPLACING BATTERIES

Follow these steps to install or replace the battery.

- Take out the battery compartment door in the direction of the arrow.
- Remove the old battery in the compartment and replace with fresh battery, as indicated by the polarity symbols (+ and -) marked in the compartment.
- Replace the battery compartment door.
- Using a straightened paper clip, press **RESET** on the calculator.

-6-