

**INSTRUCTION MANUAL:**  
**Reizen 8-Digit Talking Calculator**  
**(Item #752128)**

**Main Functions:**

- 1) Time display (hour, minute and second) in 12-hr format. "PM" will appear when it is PM time.
- 2) Alarm
- 3) 8-digit talking calculator (English) announces number/function buttons and calculations.

**NOTES:**

- Talking function is for Calculator mode only. When you are in Time mode, the buttons are not announced when pressed and time is only displayed, not spoken.
- The display will default back to Time display if the calculator isn't used for approx. 8 minutes.

**Key Descriptions:**

- 1) Number input function keys (0-9,00 and decimal point)
- 2) Arithmetic function keys (+, -, x, ÷, %, =)
- 3) ON: Use to switch to Calculator mode and to Clear current result or entry
- 4) Memory arithmetic keys (M+, M-, MR, MC)
- 5) ALM: Switch to Alarm Display mode
- 6) SET: Time and alarm setting
- 7) ON/OFF: Turns alarm on/off
- 8) MIN: Adjustment keys for setting the minute of time and alarm
- 9) HOUR: Adjustment keys for setting the hour of time and alarm
- 10) MUTE: voice on/off
- 11) → (right arrow): Input error correcting key – erases last entry
- 12) TIME: Switch to Time Display mode
- 13) REP: Repeats last number entry/result (for calculator only)
- 14) CE: Clear current result or entry

**Operations:**

1. Time Setting:
  - a. Press "TIME" key to enter the Time Display mode.
  - b. Press "SET" key to access Time Set mode. The time will flash; use "M+" and "M-" to adjust the hour and minute.  
Press "SET" to save the setting and return to Time Display.  
(It will exit the set mode automatically about 9 seconds without any operation.)
  
2. Alarm Setting:
  - a) Press "ALM" key to enter the Alarm Display mode.
  - b) Press "SET" to access Alarm Set mode. The time will flash; use "M+" and "M-" to adjust the hour and minute. Press "SET" to save the setting.  
(It will exit the set mode automatically about 9 seconds without any operation.)
  - c) Press "TIME" key to enter the TIME Display mode.
  - d) Press "MR" to turn the alarm on or off. Alarm is on when **(1:1)** appears.  
(NOTE: The alarm will only work in Time Display mode with "MUTE" in "ON" position.)

3. Alarm Sounds:
  - a. The beep alarm sounds for one minute unless it is turned off manually.
  - b. Press any key on the calculator to stop the alarm sound.

**Batteries:**

Uses 2 AAA batteries (not included.) Be sure to install batteries with the correct polarity as indicated on the inside of the battery compartment on back of the calculator.

**90-DAY MANUFACTURER'S LIMITED WARRANTY**

**REIZEN, Inc.**  
**P.O BOX 3312**  
**Farmingdale, NY 11735**  
[www.ReizenUSA.com](http://www.ReizenUSA.com)