

Manufacturer's Limited Warranty:

REIZEN guarantees this Braille Quartz Clock to be free of any manufacturer's defect for a period of 1 year from the date of purchase. We will fix or replace (at our discretion) your defective Braille Quartz Clock at no charge to you. Customer abuse, neglect or any attempt to open and repair the clock voids this warranty. Using this clock with a vibrator and AC adapter other than the Reizen recommended vibrator and adapter voids this warranty. Please return the clock to the address below, postage paid with your original receipt and payment for \$5.50 to cover return shipping. All returned clocks are subject to evaluation and approval.

REIZEN™

REIZEN Inc., P.O.Box 3312, Farmingdale, NY 11735
www.ReizenUSA.com

Reizen is a Registered Trademark of Reizen, Inc.
Copyright © 2005 Reizen, Inc. All Rights Reserved.


REIZEN™

Braille Quartz Clock
with power and vibrator jacks




USER'S MANUAL

Congratulations on your purchase of the REIZEN Braille Quartz Clock with Vibrating Option, one of the finest clocks available for people who are blind or who have low vision.

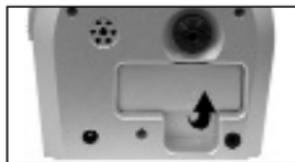

Install your battery: The battery compartment is located on the back of the clock. Insert either your thumb or index finger into the compartment's depression. Gently push the lid up and pull back to remove the compartment door. Install one AA battery into battery box located deep within the clock. With the top of the clock facing away from you, the positive end of the battery (with the nub) should be to the left as you install it. Replace the battery cover starting with the top and finishing by snapping the bottom into place. The top of the cover is the end with two nubs, while the tactile word "Open" is at the bottom.

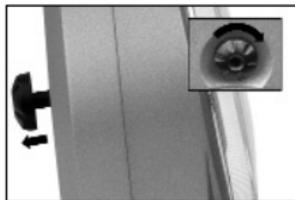


Setting the time: Remove the clear, plastic face cover. On the back of the clock, just over the battery compartment door is a large, black tactile knob. Gently lift the knob out. Turning the knob in this

"out" position moves the hands on the clock. With clock facing you, turn the knob counterclockwise. Adjust to correct time by looking at or feeling the hands. Tactile Braille is provided. When finished, push the knob back in and replace the face cover.



Telling the time: Remove the clear, plastic face cover at any time to feel the hands and Braille markings. While the clock is sturdy and well made, we recommend using a gentle touch for long-lasting enjoyment of your clock.

Always replace the face cover when finished.

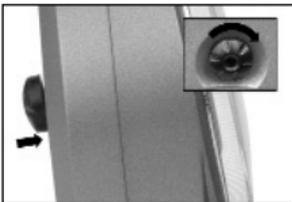

alarm time.

Setting the alarm: Set the alarm with the face cover off and the knob on the back in its "in" position. With the clock facing you, turn the dial counterclockwise until you see or feel the small alarm hand is at the correct



Alarm on/off: A ridged silver button is provided on the side of your clock. Slide the button all the way up to turn the alarm on. When activated, the alarm sounds a series of beeps until it is deactivated by the off or the snooze buttons. Slide it to the middle position to turn it off. Slide the button to the bottom to activate the Vibration Mode. Vibrator and AC Adapter must be connected for this function to work.



Snooze: A large matte silver button directly at the top of the clock can be pressed for an extra few minutes of sleep once the alarm has gone off. Or, press the snooze button at any time to provide extra illumination to the face of the clock.



Vibrator and AC Outlets: Outlets for optional vibration and AC power are included on the lower back of your clock. To use the vibration option, you must also use an AC adapter available separately. Please call for information.